



Smart Outdoor Camera

Quick Start Guide (EN)

Verkorte handleiding (NL)

Kurzanleitung (DE)

Guía de inicio rápido (ES)

Guide de démarrage rapide (FR)

Guida rapida (IT)

Guia de iniciação rápida (PT)

Hurtigstartsguide (DK)

Snabbstartsguide (SE)

Pikaopas (FI)

Krótki przewodnik (PL)

Rychlá příručka (CZ)

Príručka pre rýchly štart (SK)

Gyors útmutató (HU)

Ghid rapid (RO)

Vodnik za hiter začetek (SI)

Lietotāja rokasgrāmata (LV)

Kasutusjuhend (EE)

Vartotojo vadovas (LT)

Korisnički priručnik (HR)

R4260





Take As Global, SL hereby confirms that the R4260 Smart Outdoor Camera complies with Directive 2014/53 / EU. The full text of the EU Declaration of Conformity is below internet address available: www.wooxhome.com



Compliance with the WEEE Directive and waste disposal. This product has been manufactured from parts and materials of high quality that can be reused and can be recycled. Therefore, do not throw this product away with waste normal household appliances at the end of their useful life. Take him away at a collection point for recycling equipment electric and electronic. This is indicated by this symbol on the product, in the user manual and on the packaging. Please consult the local authorities to find out where the point of nearest collection. Help protect the environment by recycling used products.



The packaging materials of the product are made in accordance with our national environmental regulations made from recyclable materials made. Packing materials not together with dispose of with household waste or other waste. Bring them to the collection points prescribed by the local authorities for packing material.

Tech support

If you need futher help or have comments or suggestions please visit: www.wooxhome.com or FAQ & Feeback page in the App.

Tech support contact:


European: support@wooxhome.eu, +31-(0)76-7114805

Non-EU: support@wooxhome.com

How to use FAQ & Feedback in the App:

Step 1: Navigate to "Me" > "FAQ & Feedback".

Step 2: If "Most Asked" and FAQ not help, you could submit your question via "Feedback/Suggestions", we will reply you in 24 hours.

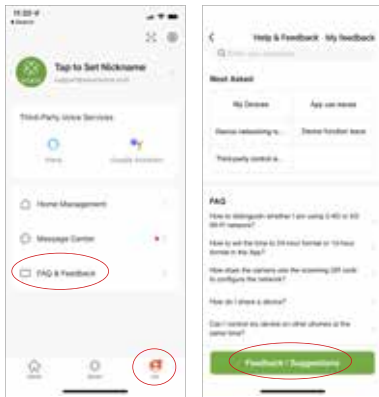


WOOX Home Youtube Channel

You could also find WOOX product videos in Youtube by searching "woox home" or "WOOX + model number".



Facebook group support

We also create a facebook group for technical support. Searching "WOOX HOME users" to join the group and leave your question.



WOOX Home app QR code



English

Frequently Asked Questions

1. Can I share with family and friends?

Yes, you can share your cameras with family and friends who will have access to view the camera and control your bulbs, plugs, and other devices. In the app, click the Family name at the top and click on the "Home Management" button, and you will be able to give or revoke sharing permissions. In order to share, the other user should already have downloaded the app and registered a new account.

2. What's the Wireless Range?

The range of your home Wi-Fi is heavily dependent on your home router and the conditions of the room. Check with your router specifications for exact range data.

3. How many cameras can I control?

WOOX Home app can control an unlimited amount of devices in an unlimited amount of locations. Your router may have a limit of how many devices can be connected to one router.


4. My device can't be connected to network with App

- Make sure the device is under the config status (indicator light is flashing quickly).
- Make sure the Wi-Fi is available and the device is not far away from the router.
- Make sure the Wi-Fi password you input is correct.

5. My device shows offline in my App

- Make sure the device is powered on.
- Make sure the network is stable and the Wi-Fi name and password not modified. If not, add device again.
- If the network is normal, but it's still offline. Check if there are too many Wi-Fi connections. You can restart your router to check the status of the device.

Product Appearance

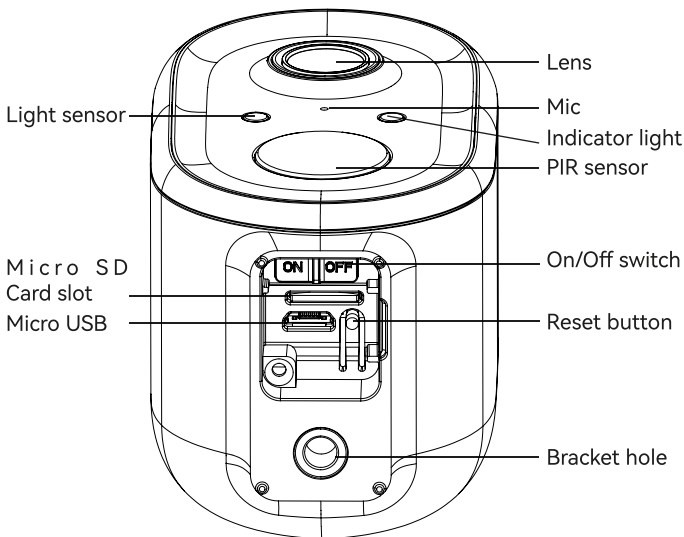

Reset device:

Hold and press the reset button above 5 seconds to factory reset device or change pairing mode.

Pairing mode:

Stand-alone mode, connecting to Wi-Fi router directly: indicator light quick flash in red (1 time per second). *Please use this mode if you don't have base station.*

Base station mode, connecting to base station (base station is not included in package): indicator light slowly flash in red (1 time per 2 seconds).

LED status for battery charging:

Charging in white; Fully charged in LED off.

English

Package includes

1. Smart outdoor camera x 1
2. USB cable x 1
3. User manual x 1
4. Screw bag x 1
5. Bracket x 1
6. Security sticker x 2

Technical Data

Batteries: 5000mAh Rechargeable batteries(included)

Battery lifetime: approximate 4 months

Resolution: 1920x1080P

IR distance: up to 8 meters

Angle of View: 110°

Audio input: Built in Mic

Audio output: Built in speaker

Two-way talk: support

Motion detection: support

Micro SD card: Max. 128G (not included)

Network:IEEE 802.11 b/g/n 2.4GHz Wi-Fi


Waterproof: IP65

Working temperature: -20 C - 45 C

Working humidity: 10%-95%RH, no condensation

Camera dimension: 56x65x95mm (not including bracket)

Installation

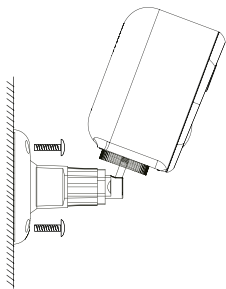

Fix bracket to the wall and install the camera.

Espanol

Introducción

WOOX Smart Outdoor Camera es una cámara de seguridad Full HD 1080P con funciones como audio bidireccional, detección de movimiento, sirena, visión nocturna, almacenamiento local y en la nube, IP65 a prueba de agua, funciona con Echo Show y Google Nest Hub, y más.

Requisito de uso:

1. Aplicación WOOX Home
2. Enrutador compatible con WLAN: 2,4 GHz (banda separada)

Configure la cámara exterior inteligente en la aplicación WOOX Home

1. Descargue e instale la aplicación "WOOX Home" de Apple App Store o Google PlayStore en su teléfono inteligente.
2. Inicie la aplicación "WOOX Home".
3. Cree una nueva cuenta o inicie sesión en su cuenta existente.
4. Toque "+" para agregar el dispositivo.
5. Seleccione el tipo de producto apropiado "Cámara inteligente" de la lista de productos.
6. Asegúrese de que la luz indicadora parpadee rápidamente en rojo. Si la luz indicadora no parpadea: mantenga presionado el botón de reinicio en la parte inferior de la cámara durante más de 5 segundos hasta que la luz indicadora comience a parpadear en rojo.
7. Confirme la red WiFi y la contraseña.
Nota: solo se admite Wi-Fi de 2,4 GHz.
8. La aplicación le pedirá que escanee un código QR para que lo lea la cámara en la cámara inteligente para comenzar a emparejar, presione continuar en la aplicación y ahora se debe generar un código QR para conectar el enlace del producto a su cuenta. Coloca tu móvil o tablet frente al objetivo de la cámara y asegúrate de que el código QR esté completamente a la vista. Una vez que escuche el mensaje de sonido, confírmelo en la aplicación, esto comenzará la etapa final de vincular la cámara inteligente a su cuenta.
9. La aplicación ahora buscará el dispositivo y registrará su cuenta.
10. Introduzca el nombre del dispositivo.

Nota: Amazon Alexa y Google Home también utilizan el nombre del dispositivo.